# Packing List:

1 X 4 Way AC 85-250V DC Switch 1 X RF Remote Transmitter (Build-in a battery)

### Features

1 Support WIFI network. (Attention: The switch module must keep connect with wifi service.)

2 Support three working modes: self-lock, inter-lock and momentary control.

- 3 Support Max 8 timing tasks for each added device.
- 4 Support status tracking, home appliances status timely feedback to your App.

5 Support 433mhz RF remote transmitter control.(Can learn most 433.92mhz transmitter, like chip 2260,2262,2264,1527. Allow 16 different transmitters to control )

#### Product Specification:

1 Input voltage: AC 85-250V

2 Maximum load: 10A

3 Working temperature: 0-60 centigrade

4 Control method: WIFI +RF Remote Control+ Manual Button Control

5 Channels: 4 Way

6 Switch size: 100\*80\*28mm

7 Passive output, commonly used as a mechanical switch.

8 Support system: Android/IOS

9 Remote control battery:A 23A/12V battery(include)

## How to connect phone with switch?

1 Download and install the software of "eWeLink" from APP store or Google play store.

2 Follow "eWeLink" instructions to register an account on it.

3 Log in your account of "eWeLink".

4 Press any manual control button (S1,S2,S3,S4) for 5 seconds until you see the LED D8 light flash quickly, then release it. Now add device on mobile phone by eWeLink APP according its introduction.

5 Now you can use your phone to control the switch under 2G/3G/4G signal.

6 You can name your own device and control it only by yourself.

7 You can also share your device with your family or friends.

#### How to learn 433mhz transmitter?

1 Press "learning button" until you see LED flash 1 time, release button, then CH1 learn.

2 Press "learning button" until you see LED flash 2 times, release button, then CH2 learn.

3 Press "learning button" until you see LED flash 3 times, release button, then CH3 learn.

4 Press "learning button" until you see LED flash 4 times, release button, then CH4 learn.

# How to set working mode?

Supply AC 85-250V power to the relay.

1: Press mode button until you see D9 flash 3 times, release button, now it is self-lock.

2: Press mode button until you see D9 flash 2 times, release button, now it is inter-lock.

3: Press mode button until you see D9 flash 1 time, release button, now it is momentary.

### What is the difference between working mode?

1 Self-lock: Press remote button A, receiver CH1 ON. press button A again, then receiver CH1 OFF

2 Inter-lock: Press remote button A, receiver CH1 ON, and receiver CH2, CH3, CH4 OFF.

3 Momentary: Keep pressing remote button A, receiver CH1 ON. release button A, then receiver CH1 OFF



